

How to install a Single, Double, Triple external housing or Spartan

Your external housing will be located between your source water and your ionizer.

Step 1 - Install filter(s) inside the housing(s) and carefully tighten the housing(s) all the way to avoid leaks.

Step 2 - Install Angle Stop Adapter or T Valve at your source water if not already done.

Step 3 - Cut tubing to the appropriate length for your installation. Connect the length of 1/4" tubing to the Quick Connect Fitting on the Angle Stop Adapter or T Valve. (Quick Connect Fitting shown in pictures).

Step 4 - Insert the other end of 1/4" tubing into the external housing at the port marked "IN".

Step 5 - Use another length of 1/4" tubing and insert one end into the external housing at the port marked "OUT".

Step 6 - Turn on source water at Angle Stop Adapter or T Valve. Flush filter(s) using a bucket to receive the water coming out of the 1/4" tubing. Flush filter(s) until water runs clear, then turn off source water.

 
Step 7 - Connect the open end of the 1/4" tubing from step 6 to your ionizer at Tap Water Inlet on the bottom of ionizer.

Step 8 - Turn on source water at T Valve or Angle Stop Adapter.

Your installation is now complete.

NOTE - If your external housing is located on your counter top, please note that your source water will be your diverter attached to your tap instead of the Angle Stop Adapter or T Valve.


See Pictures Attached.

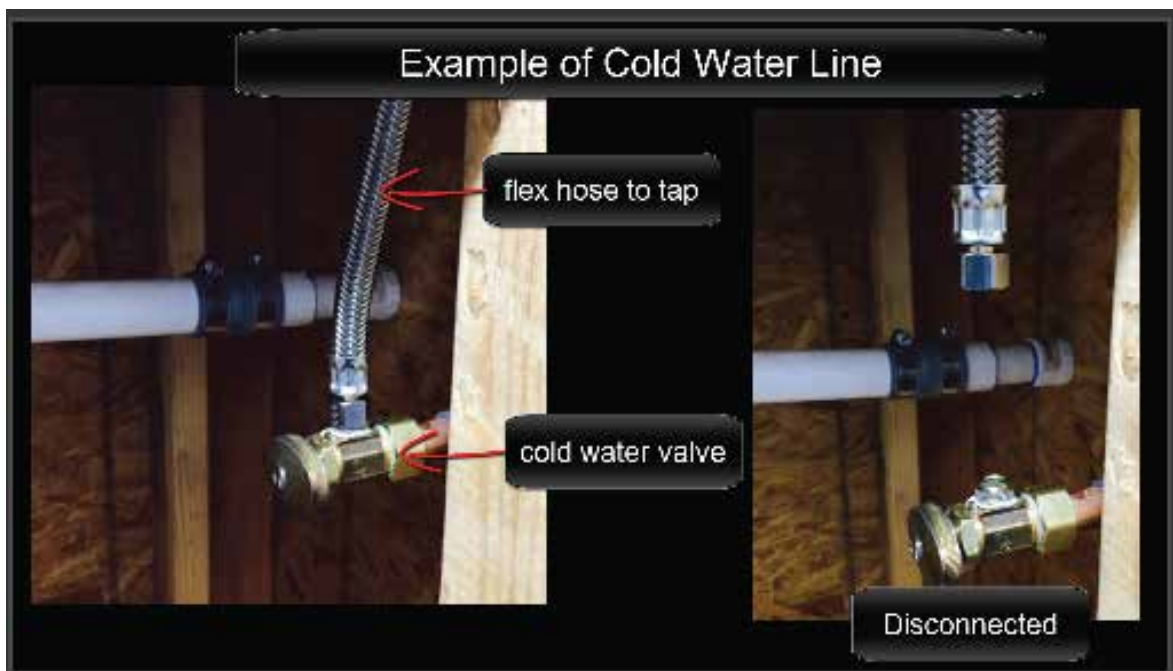



Angle Stop Adapter or T Valve installed at source water.

 
To Disconnect Quick Connect Fitting

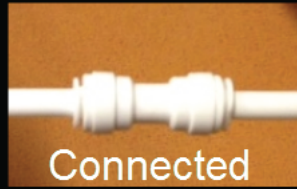


Press in on ring while pulling tubing out at the same time



 To insert 1/4" tubing into Quick Connect Fitting, push tube all the way in and tug to make sure connection is snug.

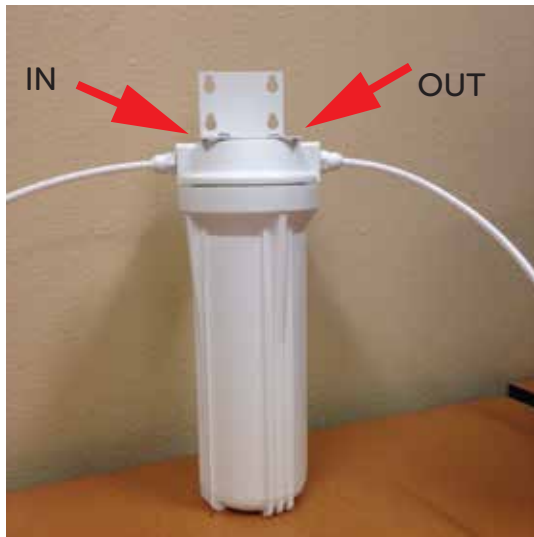

 Single Housing with 1/4" tubing installed for in and out ports.

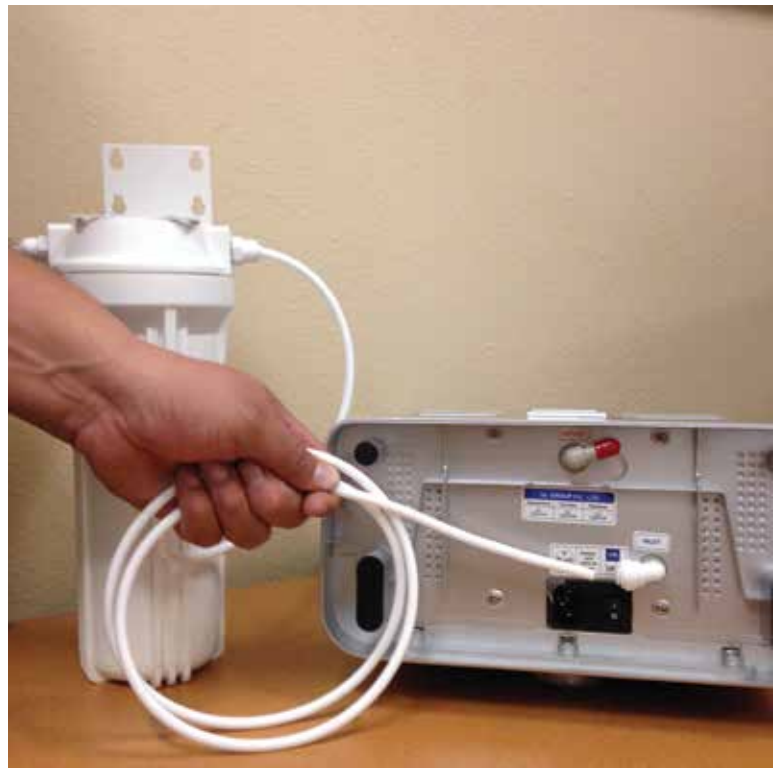

1/4" tubing coming from out port of External Housing ready to connect to Tap Water Inlet on bottom of ionizer.

